

# ► The MeasureRIGHT™ Pro


YOU'VE GOT TO MEASURE IT RIGHT TO CUT IT RIGHT

**No Calculators! No Math!**  
**No Tape Measures!**  
**No Hassles!**

visit us at  
**www.TileRight.com**  
for other innovative  
flooring tools

## INSTRUCTIONS


Please note: The MeasureRIGHT™ Pro is specifically designed to assist you with cutting and finishing the installation of a tile floor. It is not designed to start or install whole or complete tiles. To begin using your MeasureRIGHT™ Pro, complete the installation on all your full, uncut tiles. After finishing the installation on your full tiles, go to Step 1 to fit, mark and cut your partial tiles using the MeasureRIGHT™ Pro tool.

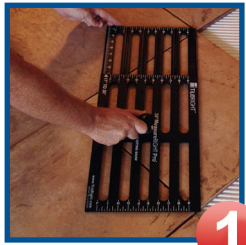

1

### DIAGONAL INSTALLATION

Taking the MeasureRIGHT™ Pro tool, turn the adjustment knob to loosen the tool. Align one end of the MeasureRIGHT™ Pro tool to a corner of the tile. Slide apart, until the other edge of the tool aligns with the opposite corner of the tile, diagonally across the width of the tile, so that the tool is adjusted to be the exact size of the tile you are installing. See Fig. 1. To this measurement, add the width of one grout joint plus the width of the wall joint. IE. If you were using a 1/4" grout joint and a 1/8" wall joint, you would add 3/8" to the tool by sliding the tool apart that amount using the numbered ruler. You are now ready to retighten the knob to lock the tool in place. This will set the measurement you need for the entire job.

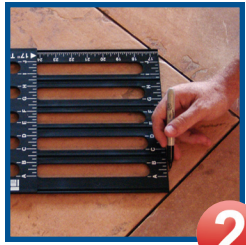

2

### STEP TWO:


Once your MeasureRIGHT™ Pro tool is properly set, you will begin working with the last full row of uncut tiles closest to the wall. Directly on top of the last full set of tiles installed, place tile by tile, your loose tiles to be cut. See Fig. 2. Position the MeasureRIGHT™ Pro tool up against the wall and draw a line along the other edge of your tool. This is where you will cut this tile. Sliding your MeasureRIGHT™ Pro along the wall to the next tile, mark your cuts, one by one, continuing down the entire row of tiles until all are marked.



3

### STEP THREE:

After the entire row of tile is marked, you are ready to make the cuts. Using eye protection and proper safety measures, cut your tile following your tile manufacturer's recommended instructions. See Fig. 3. Now, you're ready to place your cut tiles in the appropriate place, and complete your installation. Follow this process along each edge of the installation, until all tiles are cut and the installation is complete.

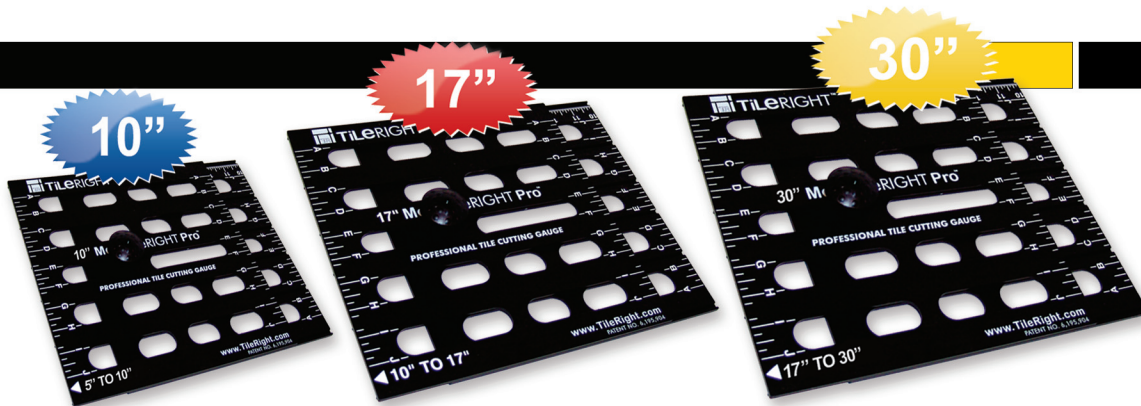

**TiLeRIGHT™**  
INNOVATIVE FLOORING TOOLS  
20871 Johnson St., Ste. 103  
Pembroke Pines, FL 33029  
**Tel:** (954) 919-4400  
**Fax:** (954) 919-4401  
**www.TileRight.com**  
PATENT NO. 6,195,904

# ► The MeasureRIGHT™ Pro

YOU'VE GOT TO MEASURE IT RIGHT TO CUT IT RIGHT

**No Calculators! No Math!**  
**No Tape Measures!**  
**No Hassles!**

visit us at  
**www.TileRight.com**  
 for other innovative  
 flooring tools

## ALTERNATIVE INSTALLATIONS

### STRAIGHT INSTALLATION

Following Step 1, align one end of the tool to the flat edge of the tile, measuring straight across the surface. Then, follow Steps 2 & 3.



### STAGGERED INSTALLATION

Great for staggered tile. The measuring and marking process remains the same as in a straight installation. No need to re-adjust the tool.




### DECORATIVE BORDERS

Following Step 1, after aligning one end of the MeasureRIGHT™ Pro tool to the corner of the tile, and measuring diagonally across, when you add the width of one grout joint, also add the width of the decorative border plus the width of the wall joint. Then, follow Steps 2 & 3.



### ODD OR IRREGULAR CUTS

Use the MeasureRIGHT™ Pro tool's alphabetical guidelines to align the tool in marking complex cuts, such as "L" cuts, doorjambs, notches, etc. There is no need to re-adjust the tool.

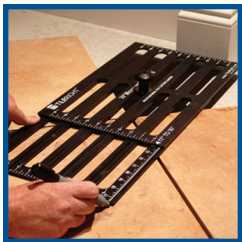

| MeasureRIGHT™ Pro | What Size Tool Should You Use?                 |  |
|-------------------|--|--|
|                   | <input type="checkbox"/> Straight Installation | <input type="checkbox"/> Diagonal Installation |
|                   | 10"  | 4x4" TO 10x10"<br>4x4" TO 6x6"                 |
|                   | 17"  | 10x10" TO 17x17"<br>8x8" TO 12x12"             |
|                   | 30"  | 17x17" TO 30x30"<br>12x12" TO 22x22"           |



**TiLeRIGHT™**  
 INNOVATIVE FLOORING TOOLS  
 20871 Johnson St., Ste. 103  
 Pembroke Pines, FL 33029  
**Tel:** (954) 919-4400  
**Fax:** (954) 919-4401  
**www.TileRight.com**  
 PATENT NO. 6,195,904